


LM-GEAR-03K Gear position sensor wiring diagram

Please refer to the ECU pinout details.
For programmable pins, please refer to your map and/or programmer.

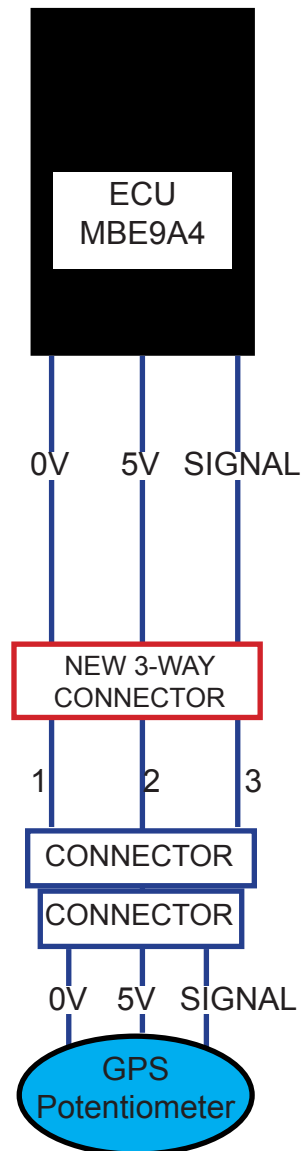

Connector Pin		Colour
1	0v	Black
2	5v	Red
3	Signal	Brown



Free technical support is available on our website. If you require personalised technical support training, this is available at a chargeable rate.