
February 2020

LM-GEAR-03K & LM-PS-UPGRADE-04

Gear position sensor and basic add-in powershift loom wiring diagram

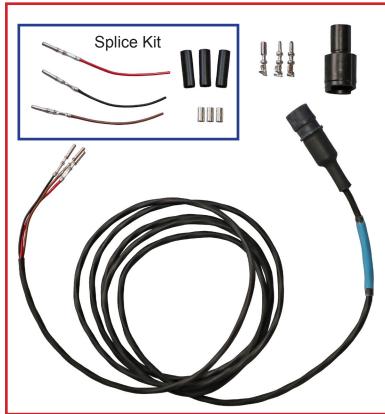


LM-GEAR-03K


Connector Pin		Colour
1	0v	Black
2	5v	Red
3	Signal	Brown

LM-PS-UPGRADE-04

Black wire	0va
Pink/Blue wire	Signal

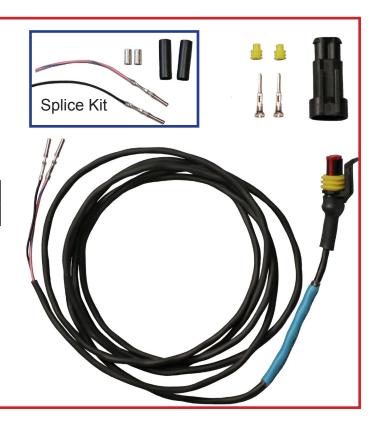

Please refer to the ECU pinout details. For programmable pins, please refer to your map and/or programmer.

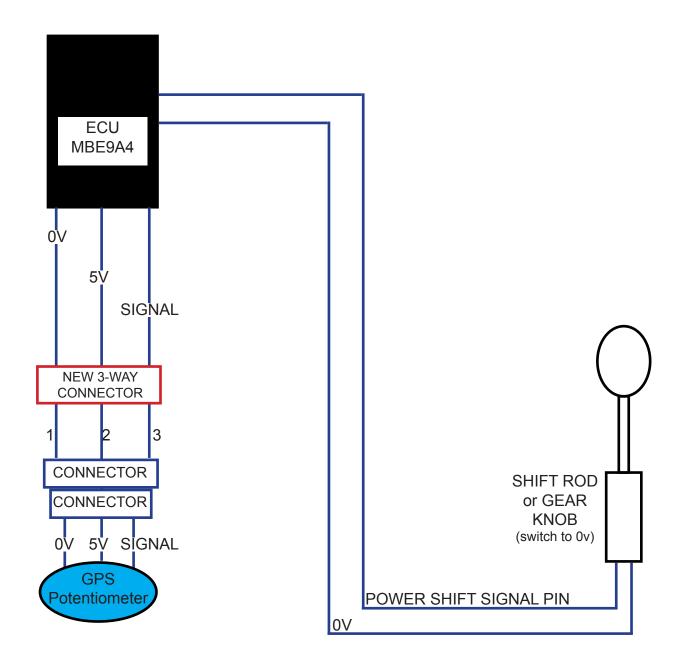

Free technical support is available on our website. If you require personalised technical support training, this is available at a chargeable rate.

