


LM-GEAR-05K



**Please refer to the ECU pinout details.
For programmable pins, please refer to your map and/or programmer.**

Suggested wiring diagram for closed loop Powershift in conjunction with non-MBE Gear Display

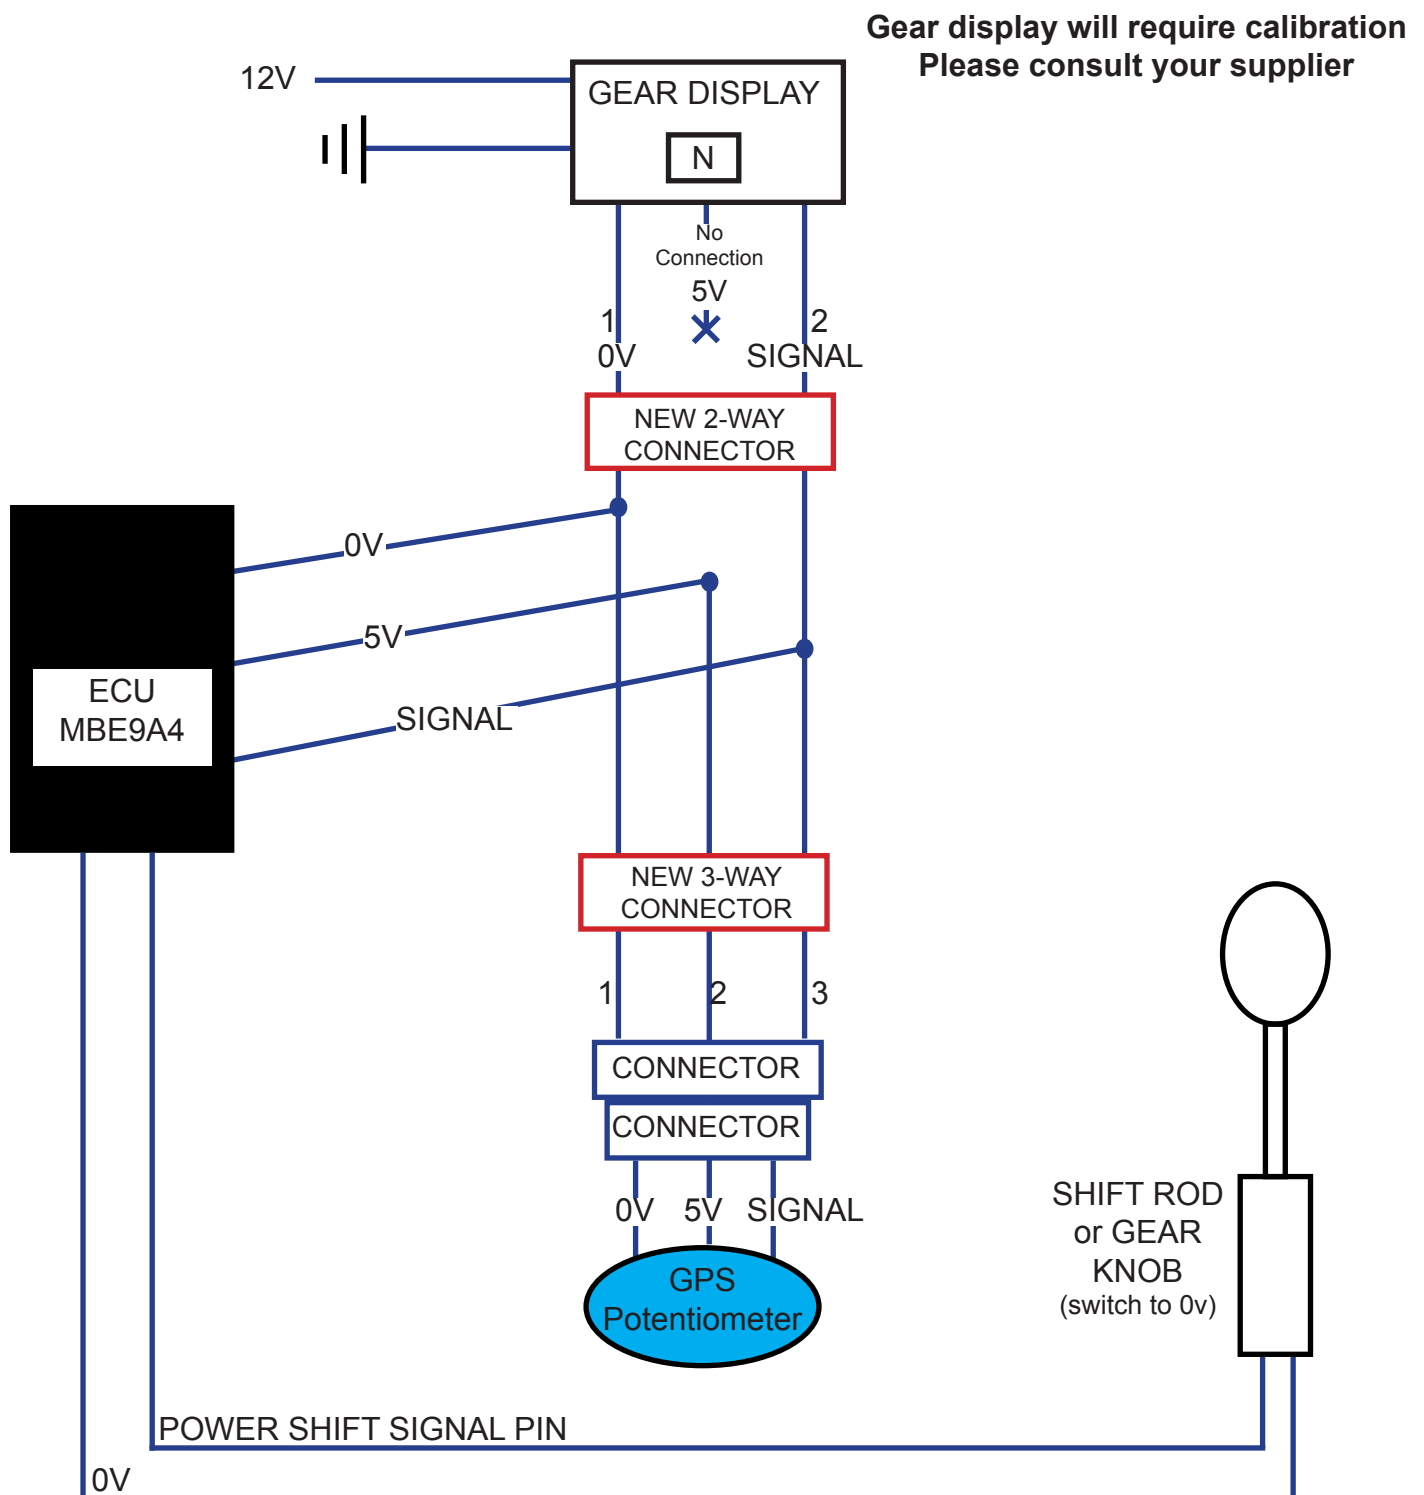

Free technical support is available on our website. If you require personalised technical support training, this is available at a chargeable rate.