
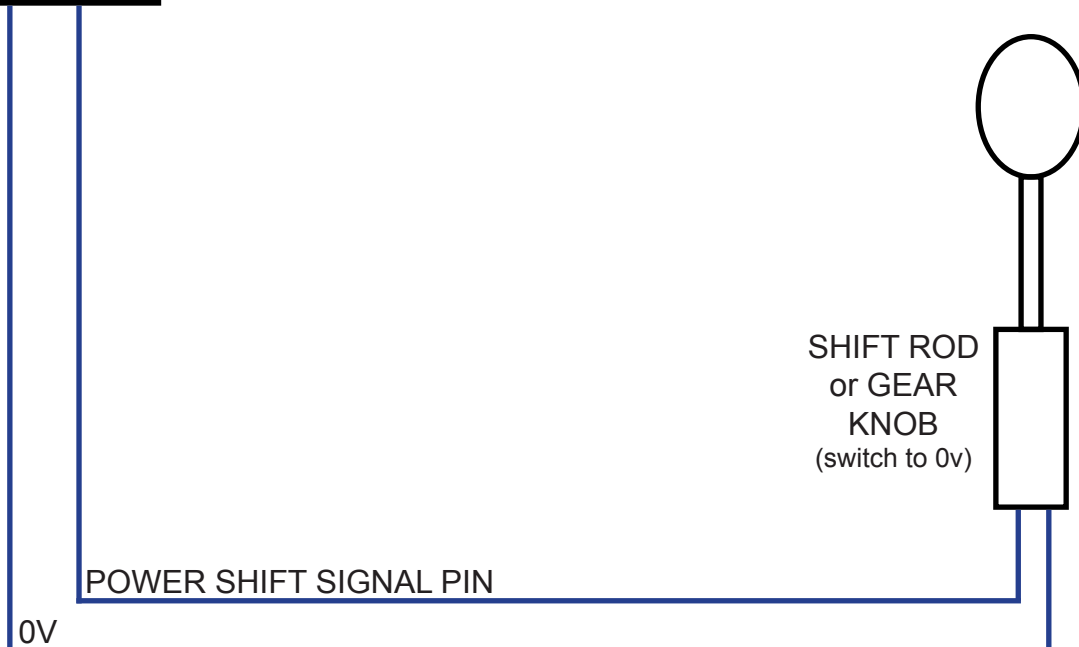


## LM-PS-UPGRADE-04

### Basic add-in powershift loom wiring diagram

**For programmable pins, please refer to your map and/or programmer.  
Please refer to the ECU pinout details.**

Black wire	0va
Pink/Blue wire	Signal

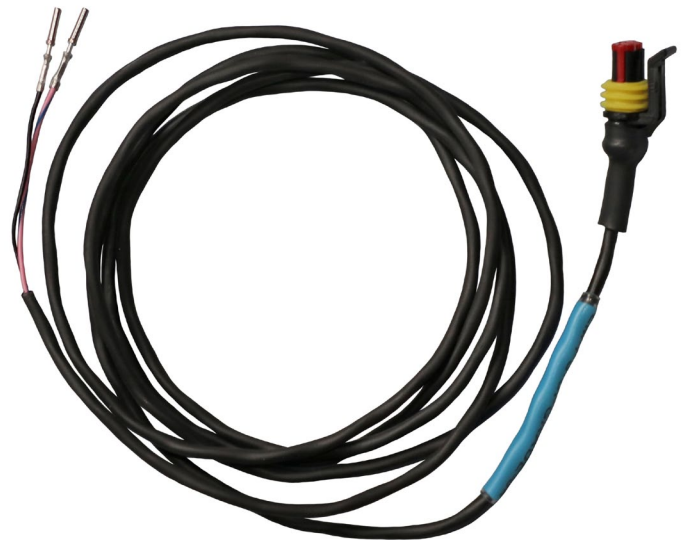

***Free technical support is available on our website. If you require personalised technical support training, this is available at a chargeable rate.***