 
 


MBE912-956 Series ECU Wiring Instruction

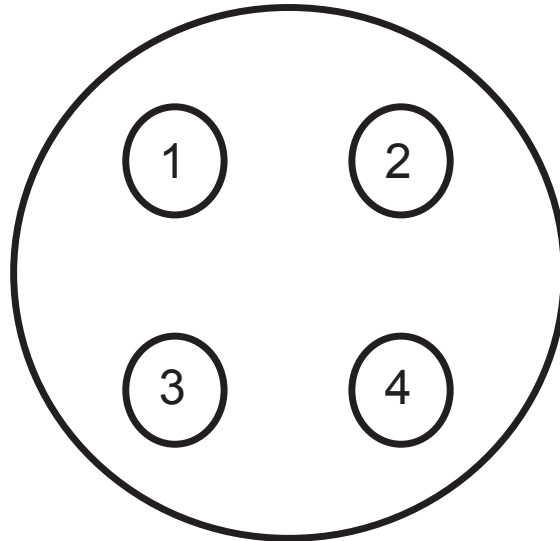

Pin 1	Purple	Perm+12V (direct to battery, via Relay)
Pin 2	White	Perm+12V (direct to battery, via Relay)
Pin 3	Grey	Gearshift light earth trigger
Pin 4	Green	Taco (Rev counter)

Connect Pins 1 & 2 through a relay as shown:-

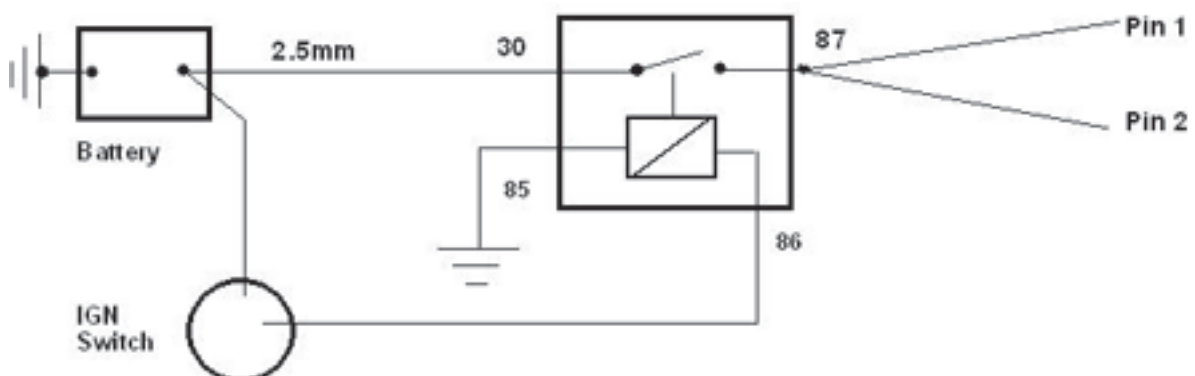

NOTE - 2.5mm Core wire must be attached directly onto battery +ve post.

Relay Pin no. 30 - Connect directly to battery +ve post with 2.5mm core wire(see note above)

Relay Pin no. 85 - Connect to Earth

Relay Pin no. 86 - Connect to ignition switched +12V

Relay Pin no. 87 - Connect to 2 wires from interface sure seal pins 1 & 2.

Installation of a large gear change lamp


Relay connections

Relay Pin no. 30 - Connect to ignition switched +12V


Relay Pin no. 85 - Connect to interface sure seal pin no. 3

Relay Pin no. 86 - Connect to ignition switched +12V

Relay Pin no. 87 - Connect to gear change lamp

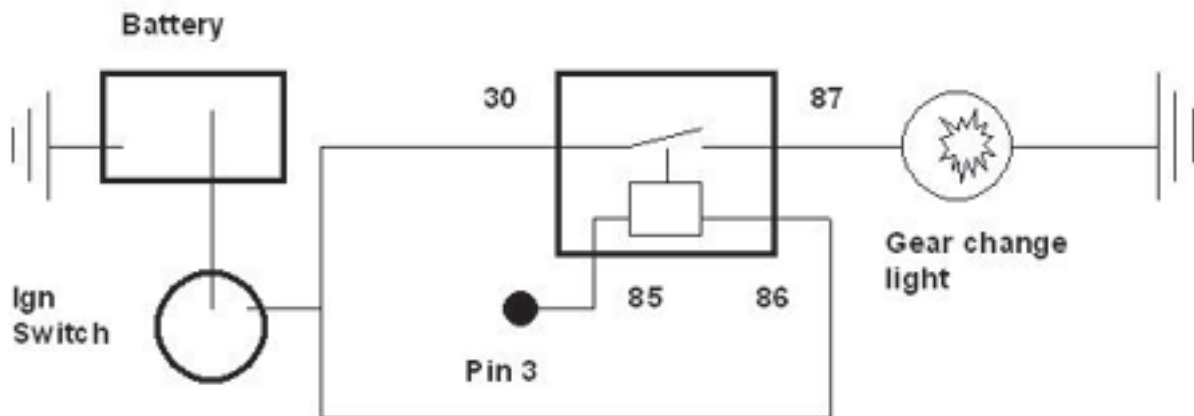

If using a small L.E.D. then a relay is not required

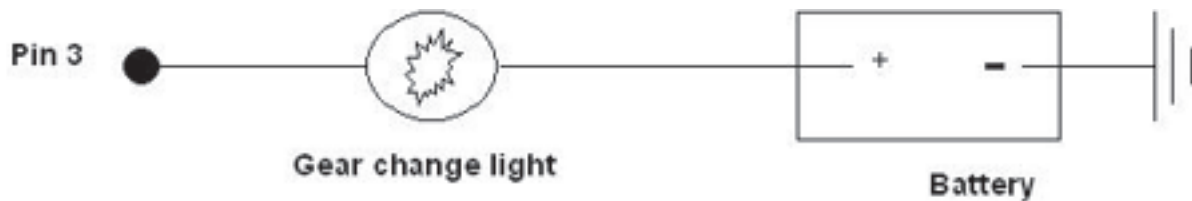

Please be aware that Technical Support involving our Technicians is chargeable

SBD Motorsport Ltd
Unit 15, Red Lion Business Park, Red Lion Road, Surbiton, Surrey. KT6 7QD
Tel: 020 8391 0121
Website: www.sbdmotorsport.co.uk

 SBDMotorsport

 sbdevelopments