

January 2014

# **CONNECTOR PIN OUT FOR 912-C ECU**

PIN NO.	SIGNAL DESCRIPTION	REMARKS
1	ELECTRONICS GROUND	
2	ECU SUPPLY +12V	
3	IGNITION DRIVE 1	
4	POWER GROUND 2 (BRAID)	
5	THROTTLE REFERENCE (5V OUT)	
6	SPEED SIGNAL	
7	AIR TEMPERATURE SIGNAL	
8	COOLANT TEMPERATURE SIGNAL	
9	POWER GROUND 1 (BRAID)	
10	IGNITION DRIVE 2	
11	INJECTOR DRIVE	
12	SPEED RETURN	
13	TACHO SIGNAL	
14	FUEL PUMP RELAY OR GEARSHIFT LIG	SHT
15	THROTTI E SIGNAL	

#### Throttle Potentiometer connections should be as follows:

Throttle Reference (ECU 05) to Throttle Pot. Supply Throttle Signal (ECU 15) to Throttle Pot. Signal Electronics Ground (ECU 01) to Throttle Pot. Return

## **Coolant Temperature Sensor connections should be as follows:**

Coolant Signal (ECU 08) to Coolant Sensor 1 or 2 Electronics Ground (ECU 01) to Coolant Sensor 2 or 1

#### Air Temperature Sensor Connections should be as follows:

Air Signal (ECU 07) to Air Sensor 1 or 2 Electronics Ground (ECU 01) to Air Sensor 2 or 1

#### Crankshaft Sensor Connections should be as follows: (Ford Sensor)

Crankshaft Signal (sensor pin 02) to ECU 06 Crankshaft Return (sensor pin 01) to ECU 12

### Crankshaft Sensor Connections should be as follows: (GM Sensor)

Crankshaft Screen (sensor pin 03) to ECU 04 Crankshaft Signal (sensor pin 02) to ECU 06 Crankshaft Return (sensor pin 01) to ECU 12

Please be aware that Technical Support involving our Technicians is chargeable

n, Surrey. SBDMotorsport sbdevelopments