

General MBE967e connection list			30/03/2000	
PIN No	DESIGNATION	NOTE		
1	FUEL TRIM	Mapping Plug 06		
2	WATER TEMPERATURE SIGNAL			
3	AIR TEMPERATURE SIGNAL			
4	5V ANALOGUE	Mapping Plug 04		
5	ANALOGUE GROUND	Mapping Plug 05		
6	POWER GROUND	Mapping Plug 01		
7	POWER GROUND			
8	POWER GROUND			
9	POWER GROUND			
10	FUEL PRESSURE INPUT/GEAR POSITION			
11	CRANK RETURN			
12	CRANK SIGNAL			
13	ECU SUPPLY			
14	SERIAL RECEIVE	Mapping Plug 03		
15	FAULT LIGHT / SWITCH			
16	SHIFT LIGHT	Switched Ground		
17	FUEL PUMP RELAY DRIVE	Switched Ground		
18	IGNITION DRIVE 2	Cylinders 2 + 3	Not used if distributor fitted	
19	POWERSHIFT INPUT	Ground Active		
20	THROTTLE SIGNAL			
21	MAP SIGNAL (BOOST PRESSURE)			
22	5V ANALOGUE			
23	ANALOGUE GROUND			
24	ANALOGUE GROUND			
25	OIL TEMPERATURE			
26	IGNITION TRIM	Mapping Plug 07		
27	OIL PRESSURE			
28	BAROMETRIC PRESSURE SIGNAL / LAUNCH INPUT			
29	LAMBDA SIGNAL			
30	NOT USED	Not Used		
31	NOT USED	Not Used		
32	SERIAL TRANSMIT	Mapping Plug 02		
33	RADIATOR FAN RELAY DRIVE	Switched Ground		
34	TACHOMETER SIGNAL			
35	INJECTOR OUTPUT	All Cylinders		
36	IGNITION DRIVE 1	Cylinders 1+ 4	Coil drive if distributor fitted	
NOTES:				
1 All digital outputs are switched ground . I.e. to turn on the Shift Light, the ECU output is switched to ground				
These type of outputs are on pins: are on pins 15, 16, 17 and 33				
2 The Mapping Plug should be wired as follows:				
ECU Pin #	Mapping Plug Pin #			
6	1			
32	2			
14	3			
4	4			
5	5			
1	6			
26	7			
3 The Powershift input should be switched to ground to activate the Powershift function				
4 The Vauxhall Crankshaft Sensor should be wired as follows:				
Sensor #	ECU Pin #			
1	11			
2	12			
3	Ground			
5 The Throttle Position Sensor (TPS) should be wired as follows:				
Sensor #	ECU Pin #			
1	TBA			
2	TBA			
3	TBA			
6 The Barometric Pressure Sensor should be wired as follows:				
Sensor #	ECU Pin #			
A	23			
B	28	AND LAUNCH INPUT (ground active)		
C	22			
7 The Lambda Sensor should be wired as follows:				
Sensor #	ECU Pin #			
1	TBA			
2	TBA			
3	TBA			
4	TBA			
8 The Fault Lamp output is a switched ground				
9 Crankshaft Sensor Wiring:				
58 tooth wheel:		GM Sensor		
		Pin 01 = Return		
		Pin 02 = Signal		
		Pin 03 = Screen		

		Ford Sensor (not Cosworth)		
		Pin 01 = Return		
		Pin 02 = Signal		
		Magneti-Marelli Sensor		
		Pin 01=Signal		
		Pin 02=Return		
	35 tooth wheel:	GM Sensor		
		Pin 01 = Signal		
		Pin 02 = Return		
		Pin 03 = Screen		
		Ford Sensor (not Cosworth)		
		Pin 01 = Signal		
		Pin 02 - Return		
		Magneti-Marelli Sensor		
		Pin 01=Return		
		Pin 02=Signal		