


All serial type ECUs must only be linked to your computer using either an SBD mapping lead or a lead manufactured exactly to the details shown below. Support is no longer available for serial type ECUs.

**DO NOT USE A STANDARD SERIAL LEAD AS THIS COULD CORRUPT YOUR MAPS, PROGRAM, DAMAGE THE ECU OR EVEN THE LAPTOP.**

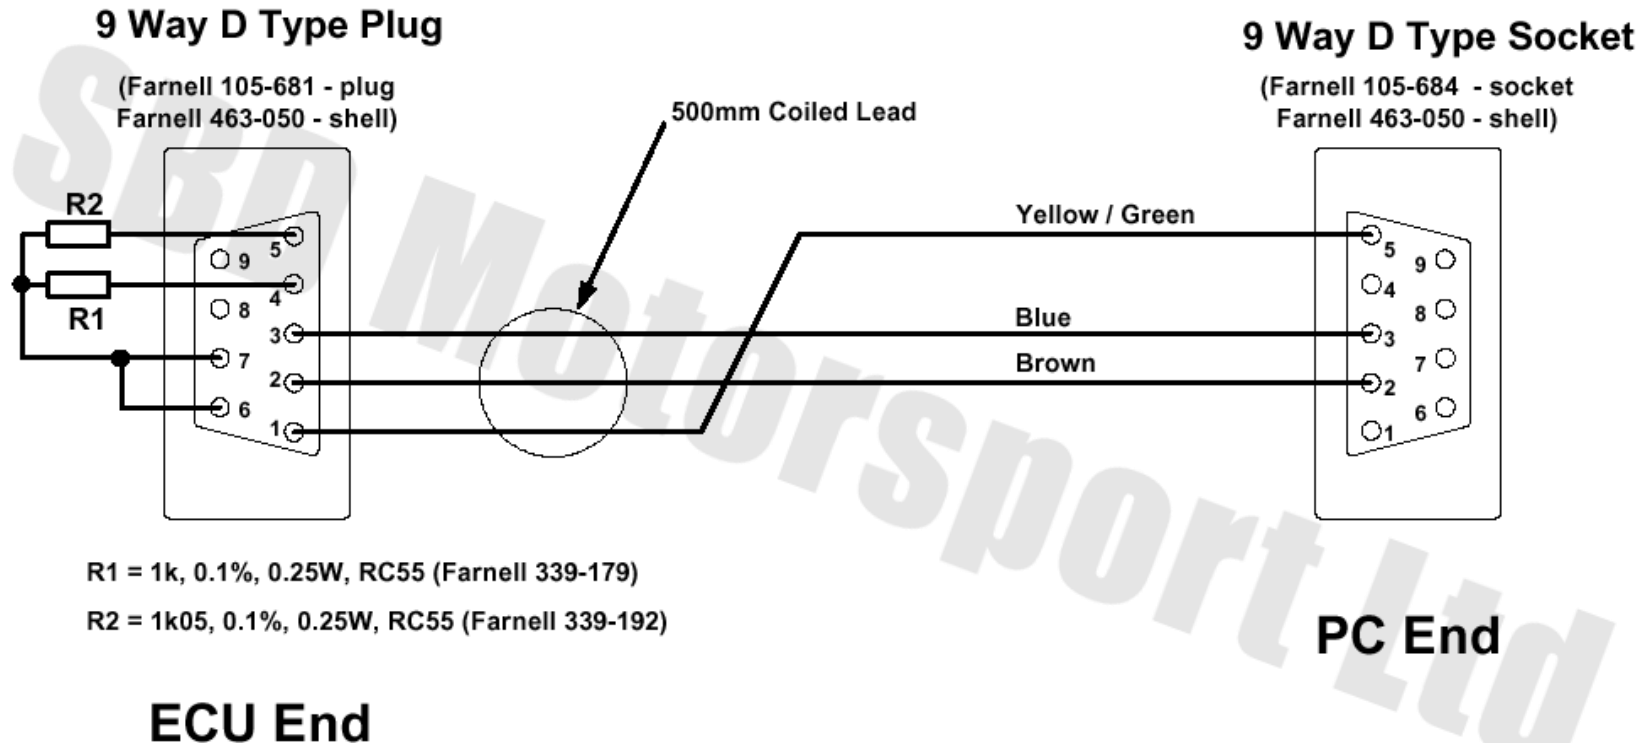

## **MBE Coiled Mapping Lead Pin-out**