


## SBD Plumbing of Fuel System with Swirl Pot for Non-DI Engines (For 8 Injectors)

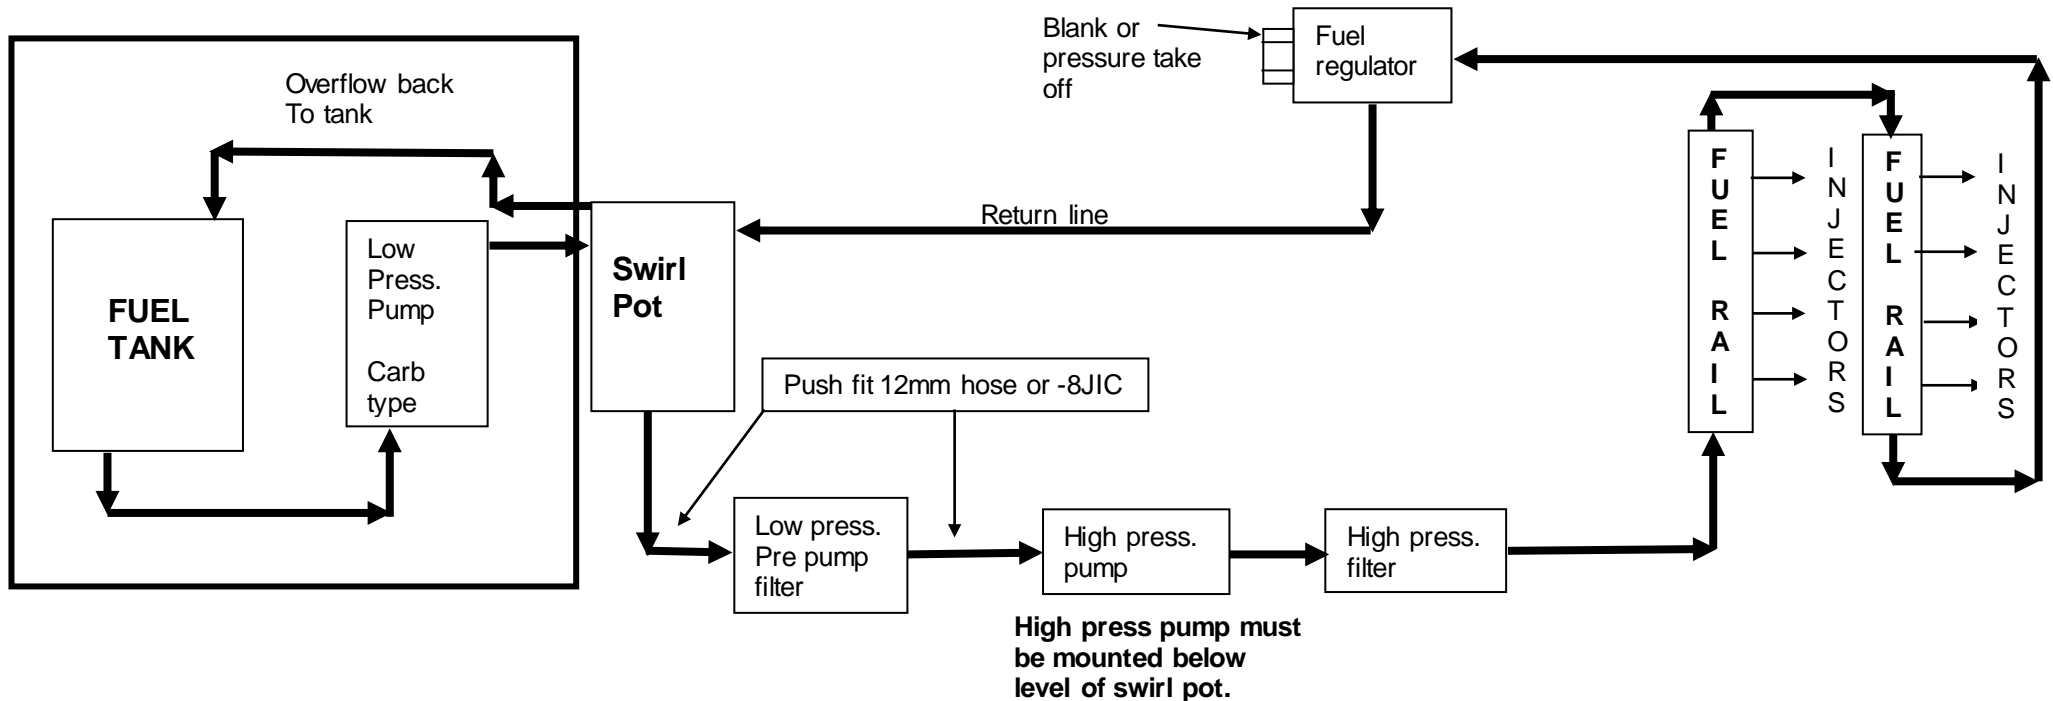

### Notes.

1. On long runs use Teflon braided hose.
2. On short runs use rubber braided hose.
3. Use straight connectors where possible as they are approx. 1/3 of the price of angled ones.
4. High-pressure & Return to swirl pot couplings use JIC -6.

