


SBD Plumbing of Fuel System with Swirl Pot for Non-DI Engines (Recommended)

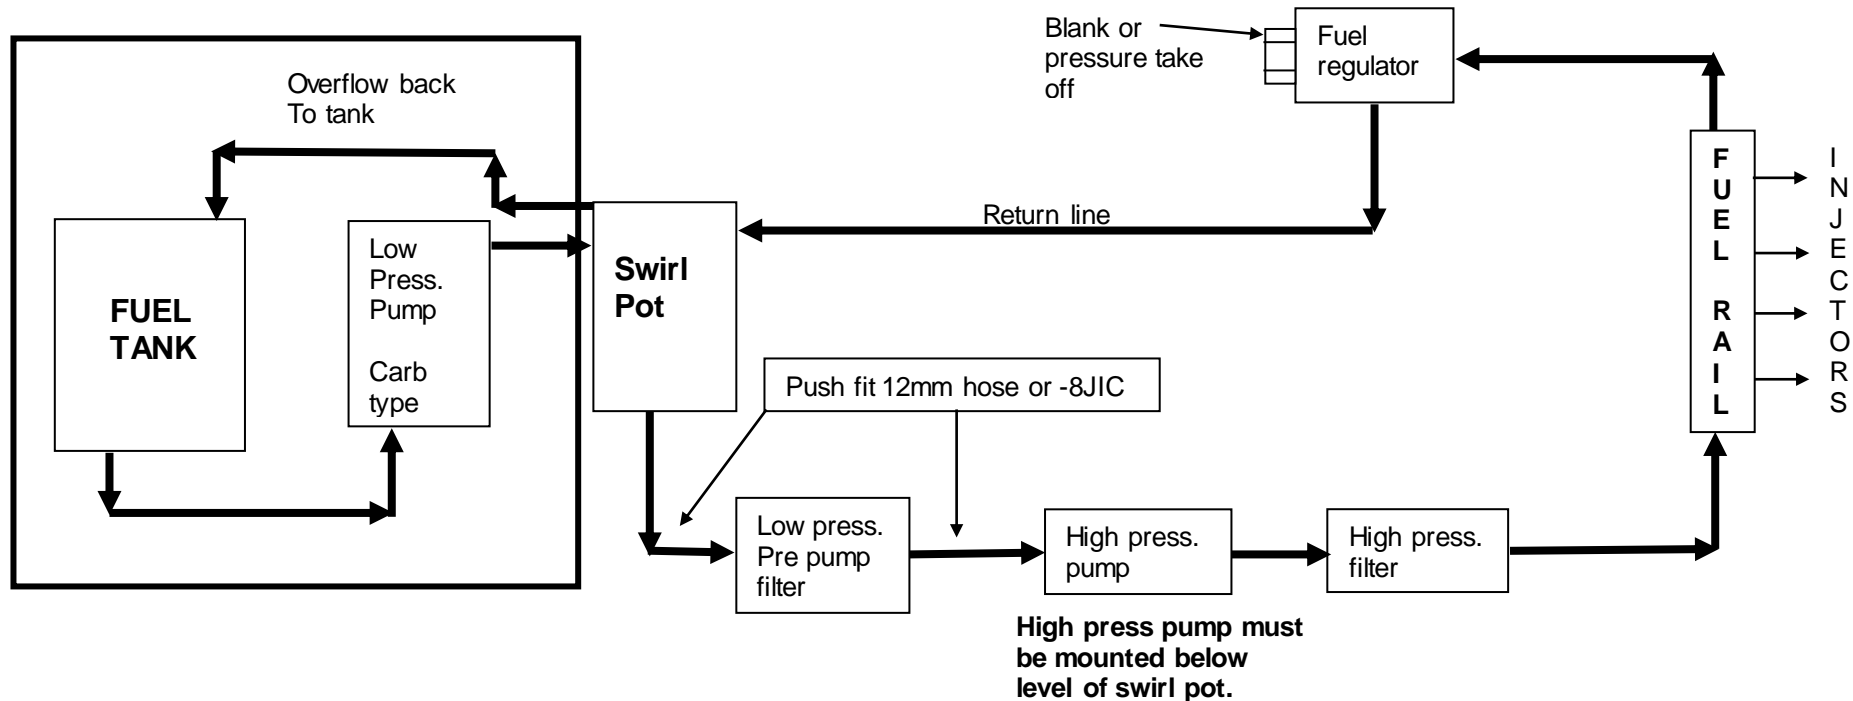

Notes.

1. On long runs use Teflon braided hose.
2. On short runs use rubber braided hose.
3. Use straight connectors where possible as they are approx. 1/3 of the price of angled ones.
4. High-pressure & Return to swirl pot couplings use JIC -6.



SBD Motorsport Ltd
Unit 15, Red Lion Business Park, Red Lion Road, Surbiton,
Surrey. KT6 7QD
Tel: 0208 391 0121
Website: www.sbdmotorsport.co.uk



SBDMotorsport



sbdevelopments